

# smartRobot®

## Simplified Functionality-Test after Transportation

For transportation or long time no use, all axes can be manually moved to required position. With functionality of the integrated Touch-Screen, it can be done without Remote Pendant. This may help to have a simplified packaging, handling and easy work.

Figure 1. shows an overview of main functions.

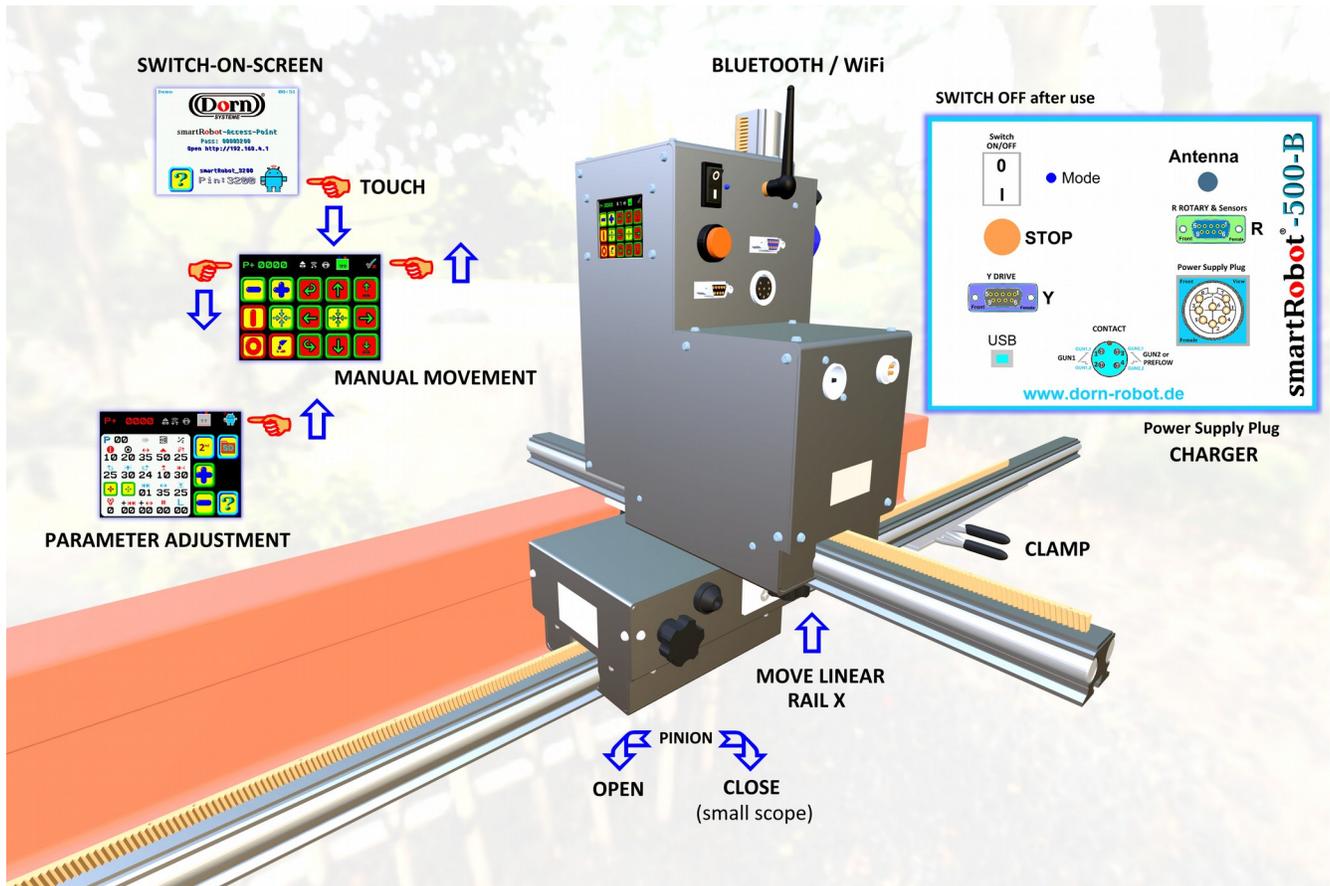


Figure 1.

After Switch-On, touch-buttons can be used to activate linear movement to other position, or only to test that all Functions are working well. Without electrical motor-power, all axes are fixed.

For packaging of the unit, please don't forget to Switch-Off. **smartRobot®** does NOT have an automatic Switch-Off-Mode, it should continue welding as needed and must not be stopped because of low battery. For movement test, use arrow-buttons:

Change or adjust manual Speed-Parameter at

For automatically fast movement back to Zero-Point, use button

All movement or weld can be stopped directly by button **STOP** or Touch-Screen-Button: